

EXCELPrime Single Wall Stove Pipe



Heavy wall, 22ga satincoat steel

- Truly scratch resistant
- Superior paint adhesion
- Highly corrosion resistant inside & out

Laser welded

- Perfectly round
- No assembly required (no snap lock)
- Fast, easy installation


Attractive design

- Smooth exterior
- No unsightly beads or bumps


Stove Bright, Flat Black paint

- Highest paint quality
- Matches more stoves than any other paint
- Easy to touch up

100%, no questions asked, 5 year replacement warranty

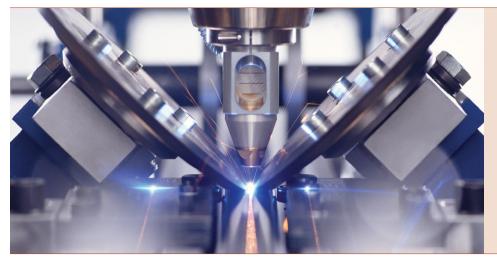


Every length of EXCELPrime is welded by sophisticated laser equipment

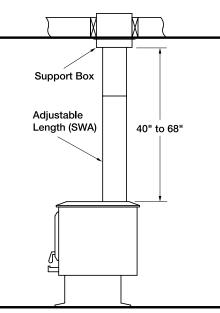

Straight up installation

For most straight up installations, the only part required is an adjustable length (SWA). The SWA adjusts to allow any overall length form 40" to 68".

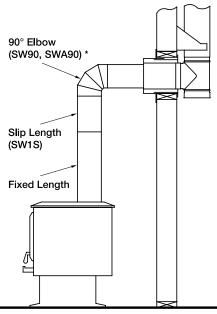


90° elbow installation

For most 90° elbow installations, you will only require an elbow (SW90 and an adjustable length SWA). If the height from the top of the stove to the top of the elbow is less than 48", you will require a short length plus a slip section (SW1S) for the vertical section of the connector instead of the SWA.

*All adjustable elbows require tolerance to permit them the turn. This can infrequently allow a small amount of water leakage. Fixed elbows have a smaller radius and are drip free.





в

ELBOW DIMENSIONS


CODE A		В				
Fixed Elbows						
6SW45	2 5/8"	2 1/4"				
7SW45	2 7/8"	2 1/4"				
8SW45	3 1/8"	2 1/2"				
6SW90	4 3/4"	5 3/8"				
7SW90	5 1/4"	5 7/8"				
8SW90	5 3/4"	6 3/8"				
Adjustable Elbows						

6SWA90	5 3/8"	6 3/8"	
7SWA90	5 7/8"	6 7/8"	
8SWA90	6 3/8"	7 3/8"	




MASONRY ADAPTER DIMENSIONS						
CODE	Α	В	C	D		
6SWM	6 1/4"	10 1/2"	6 5/8"	4 3/4"		
7SWM	7 1/4"	11 1/2"	7 5/8"	4 3/4"		
8SWM	8 1/4"	12 1/2"	8 5/8"	4 3/4"		


L S A

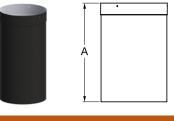

SLIP / ADJ. LENGTH DIMENSIONS					
CODE	A MIN.	A MAX.			
SW1S	1 3/8"	12" (10 1/4" installed)			
SWA (2pcs)	40"	68"			

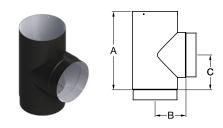

TEE DIMENSIONS					
CODE	Α	В	C		
6SWT	10 5/8"	4 1/4"	4 3/4"		
7SWT	10 5/8"	4 3/4"	4 3/4"		
8SWT	10 5/8"	5 1/4"	4 3/4"		

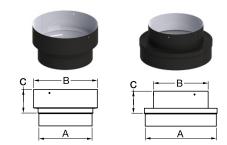

INCREASER / REDUCER DIMENSIONS						
CODE	Α	В	C			
SWI67	6"	7 1/8"	2 5/8"			
SWI68	6"	8 1/8"	2 5/8"			
SWR86	8"	6 1/8"	2 1/2"			

THE PARTS FOR ANY JOB						
Lengths (SW)	12"	18"	24"	36"	48"	
Slip Length (SW1S)	Adds 1 3/8" to 10 1/4" of length to a fixed length					
Adjustable length (SWA)	Spans 40" – 68"					
Elbows (SW45, SW90, SWA90)	45°, 90° & 90° adjustable					
Tees (SWT)	Tee Cap not included (SWTP)					
Increaser / Reducer (SWI, SWR)	6"-7" & 6"-8" increasers, 8"-6" reducer					
Masonry Adapter (SWM)	Adapts to an existing masonry chimney					

Visit our website at www.icc-rsf.com

400 J-F Kennedy, St. Jerome (Quebec) Canada J7Y 4B7 Telephone: (450) 565-6336 | Fax: (450) 565-6519