#### Hi-tech Performance -Old Fashioned Appearance

Double Wall Construction with a 3/8" air space between inner and outer pipes provides superior insulating value to single wall pipe. Better insulating value keeps flue gas temperatures higher. This helps your wood stove perform with an enhanced draft, which provides:

- less chance for moisture or soot build up within the vent
- reduced smoking of the stove at start up
- increased efficiency

**ULTRABIack** not only keeps the flue temperatures higher, it keeps the outer pipe temperatures cooler. This allows **ULTRABIack** to be installed with only 6" clearance to combustible materials. Single wall stove pipe requires an 18" clearance, which typically means your wood stove sits further away from the wall and takes up valuable space within the room.

#### Most attractive double wall product on the market, no unsightly slots or vents

The outer casing is constructed of Satincoat steel. Satincoat is attractive and durable when painted. **ULTRABlack** is painted with Forrest Paint "Stove Bright" premium quality, high temperature paint to provide a rich appearance that complements your wood stove.

#### CONSTRUCTION

Flue: .016" stainless steel

#### Casing: .019" satin coat steel Satin coat is specifically designed to be painted

Seam: Interior and exterior seams are continuous seam welded

Wall thickness: Approximately 3/8"

Paint: Forrest Paint "Stove Bright" flat black

- Fits all brands of type A chimney.
- Fits almost all makes & models of wood stoves without the need of an adapter.
- Oval to round fits oval stove flue collars.

# Never, ever buy another stove pipe

## **No Hassle Lifetime Warranty**

We warranty the **ULTRABIack** chimney connector against burn out when it is used to vent a wood burning stove or free standing fireplace. If any component of your **ULTRABIack** stove pipe system ever burns out (develops a perforation as a result of use or corrosion) simply return it to any Excel dealer for a replacement part at no charge. Sorry, we won't pay any labor to remove or replace the **ULTRABIack**, and we won't pay the freight between you and the dealer.

The fine print: you don't need your original bill of sale. You don't need the date of installation. You don't need to show us that the chimney was cleaned regularly (but we recommend it). You don't need to fill out a warranty card. You don't even need to know our toll-free number. Just bring the **ULTRABIACK** to your local Excel dealer and they will give you a new one. Period.



400 J-F Kennedy St. Jerome Quebec Canada, J7Y 4B7 **Tel.: (450) 565-6336** Fax: (450) 565-6519 Web site: www.icc-rsf.com



UB-FH 2008-04

## **ULTRABlack** double wall stove pipe



- 6" clearance to combustibles even when installed in a corner, or parallel with a ceiling\*
- Smooth, clean appearance to complement any stove installation
- Maximizes flue gas temperature insuring good draft
- Minimizes creosote buildup
  Some stoves may require greater clearances.

# **ULTRABlack**

#### Lengths

#### Available in 5", 12", 18", 24" and 36".

TT	
A B	
++	

Lengt	Lengths Dimensions 6" - 7" - 8"			
Code	A	В		
6-7-8 UB5F	5″	4″		
6-7-8 UB1F	12″	11″		
6-7-8 UB18F	18″	17″		
6-7-8 UB2F	24″	23″		
6-7-8 UB3F	36″	35″		

#### Adjustable Lengths

Combines a 36" length and a 36" slip length in one box. The UBAF fits all brands of insulated chimney and most brands of wood burning stoves without a stove or chimney adapter. Supplied with a trim collar, not shown.

1.000	Dimensions			
Code	A min.	A max.	B min.	B max.
6UBAF	40″	68″	39″	67″
7UBAF	40″	68″	39″	67″
8UBAF	40″	68″	39″	67″

#### Slip Lengths

These lengths slide over a regular straight length allowing you to adjust the overall length of a straight run without cutting. The minimum adjustment can be reached only if the length used below the slip length is long enough to accept it.

T-	
AB	
Ĭ	

Dimensions				
Code	A min.	A max.	B min.	B max.
UB6SF	2″	6″	1″	5″
UB12SF	2″	12″	1″	11″
UB18SF	2″	18″	1″	17″

Tees

Combines a 90° transition with a clean out. Supplied with a trim collar, not shown.



#### Dimensions Code Α В D С 12″ 6″ 5 7/8" 6UBT 11″ 12″ 11″ 6″ 5 7/8" 7UBT 8UBT 12″ 11″ 6″ 5 7/8"

#### Elbows 30°, 45° and 90°

#### Available in 30°, 45° and 90°.

		Dimensio	ns
<b>488</b> 177	Code	A	В
100 200	6UB30	2 5/16″	2 9/16″
	7UB30	2 7/16″	2 11/16"
Â.	8UB30	2 9/16″	2 13/16"
	6UB45	2 3/4″	3″
-B-+	7UB45	2 15/16″	3 3/16″
-	8UB45	3 1/8″	3 3/8″
	6UB90	5 9/16″	4 1/2"
	7UB90	6 1/16″	5″
	8UB90	6 9/16″	5 1/2″

#### Reducers

Designed to reduce the diameter of a system to accomodate a range of flue sizes, appliances and installations.

Increasers

Designed to increase the diameter of a system to accomodate

Code

UBI56

**UBI67** 

**UBI68** 

UBI78

a range of flue sizes, appliances and installations.



Dimensions				
Code	A	В		
UBR76	8″	7″		
UBR86	8″	7″		
UBR87	8″	7″		

**Dimensions** 

В

7″

7″

7″

7″

Α

8″

8″


8″

8″

Dimensions			
Code	A	В	
6UBSE	2 1/2″	1 1/2″	
7UBSE	2 1/2″	1 1/2″	
8UBSE	2 1/2″	1 1/2″	

#### Masonry Adapters

Connect ULTRABlack to a masonry chimney.



Dimensions				
Α	В	С	D	
11 11/16″	1011/16"	12″	6 1/8″	
11 11/16″	1011/16"	13″	7 1/8″	
11 11/16″	1011/16"	14″	8 1/8″	
	<b>A</b> 11 11/16″ 11 11/16″	A      B        11      11/16"      1011/16"        11      11/16"      1011/16"	11      11/16"      1011/16"      12"        11      11/16"      1011/16"      13"	


#### Trim Collars

Covers the top end of ULTRABIack where it connects to the insulated chimney. A UBTC is included with every UBAF and UBT so they rarely need to be purchased separately.

	Dimensions		
	6UBTC	22″ x 2″	
	7UBTC	25 3/8″ x 2″	
E.	8UBTC	28 1/2″ x 2″	

### **Oval to Round Adapters**

Adapters are designed to connect ULTRABlack to stoves with oval flue collars (ex.: Vermont Castings Defiant Encore). Available in 8" only.

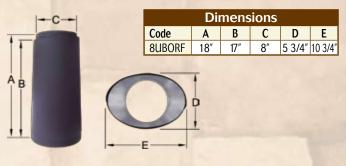

#### **Stove Adapters**

Connect ULTRABIack to stoves with flue collars that do not project above the top of the stove. It can also be used to connect to stoves with irregular shaped or sized flue collars.

	Dimensi
CLIDTC	20